 


ENGLISH


## QUICK START GUIDE



 
## Getting Started

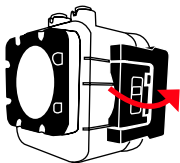


1 Open the latch

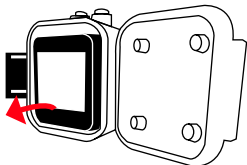

2 Slide the X90 out

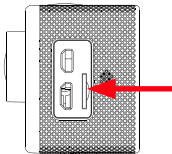 

 3 Insert a Micro SD card  
(not included)

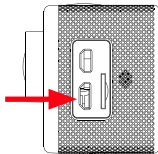

4 Charge the X90  
using the supplied cable

Before using the X90 for the first time you should fully charge the battery. It takes approximately 4 hours to fully charge.

## Product Diagram

**A** Power / Mode Button

**B** Record/OK Button

 
**C** Menu Button

**D** Navigation /Zoom Button

**E** LCD Screen

**F** Micro SD Card


Top View

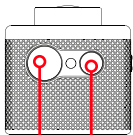

**A**

**B**

 
Right View

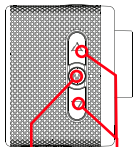

**C**


**D**

 Back View

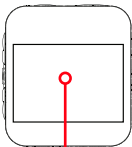

**E**

 Left View

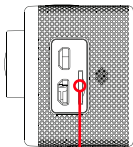

**F**

## Camera Settings

- Default Video Capture Resolution: 1080P@30fps
- Default Camera Capture Resolution: 12M (4032x3024)

Camera Mode

Battery Indicator



Resolution

Timecode

## Format your Memory Card

It is important to format your Micro SD card first to ensure it is compatible.

Note: A Class-6 or Class-10 Micro SD card up to 32GB is recommended.

1. Turn the X90 ON (Hold the Power button for few seconds to turn the X90 ON).
2. Press the Menu (M) button.
3. Enter the Setup Menu.
4. Scroll down using Up/Down button and select Format SD Card.
5. Press Record button, Select OK and Press the Record button again.

*Note: Formatting the card will permanently delete contents of the card. Be sure to save any important files.*

## Using Camera Modes

### Video Mode:



Once the X90 is turned **On**, **Video Mode** is selected by default. Press the **Record** Button to start recording.

When the recording starts, you will notice the status indicator light on the X90 flashing. To end recording, press the Record button again.

*Tip: Use Up/Down button for zooming in/out*

## Picture Mode



This mode will allow you to take snapshots.

### To activate this mode:

Turn the X90 **On**.


Once it is ON, **Press** and **Release** the **Power** button. This will switch the camera from Video Mode to **Picture Mode**.

*Note: Do not hold the Power button as it will turn the camera off.*

You will notice this icon (📹) on top left corner of the screen.

Press the **Record** button to capture snapshots.

 Tips: Use Up/Down button for zooming in and zooming out.

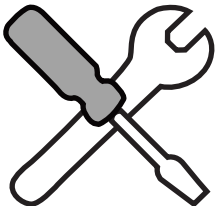

## Contact Us

Need further assistance? Please visit:

**[www.kaiserbaas.com/support](http://www.kaiserbaas.com/support)**

Or email:

**[helpdesk@kaiserbaas.com](mailto:helpdesk@kaiserbaas.com)**