

USER GUIDE



HD | MediaHub+
Watch movies, listen to music
and view photos

KAISER BAAS

Languages

English

4

Community



/kaiserbaas

Register this product for 12 month warranty:
www.kaiserbaas.com/register

Get product updates:
www.kaiserbaas.com/updates

Tech support:
e: helpdesk@kaiserbaas.com
w: www.kaiserbaas.com/support
p: Australia 1300 302 306
p: New Zealand 0800 302 306
(business hours, AEST)

Contents

Safety Precautions	6
What's in the Box	7
Product Diagram	8
HD MediaHub+ Remote	9
Setting up the HD MediaHub+	10
Home Screen	13
1. File Manager	14
2. Movies	18
3. Photos	21
4. Music	24
5. Setup	27
Setup options	28
Frequently Asked Questions	35
Contact Us	36

Safety Precautions

 
Before using the HD MediaHub+ please ensure you read and understand all the safety precautions below:

- Do not attempt to open the unit or modify it in any way, as this will void your warranty. Maintenance and repairs should only be performed by Kaiser Baas.
- Keep the HD MediaHub+ away from water and other liquids. Do not use wet hands when using the HD MediaHub+ as this may cause the unit to malfunction.
- Keep the HD MediaHub+ away from direct sunlight and heat sources.
- HD MediaHub+ may become slightly warm during use, this does not indicate malfunction.
- Do not place heavy objects on the HD MediaHub+, as this may cause it to malfunction.
- Do not dispose of the unit via conventional domestic waste.
- Use the supplied power adapter; do not substitute for another adapter.

What's in the Box

Please ensure the product package has all the following contents:


- A HD MediaHub+
- B Power adapter
- C Remote control
- D Warranty Card
- E User Guide
- F Quick Start Guide
- G 2 x AAA batteries
- H HDMI cable

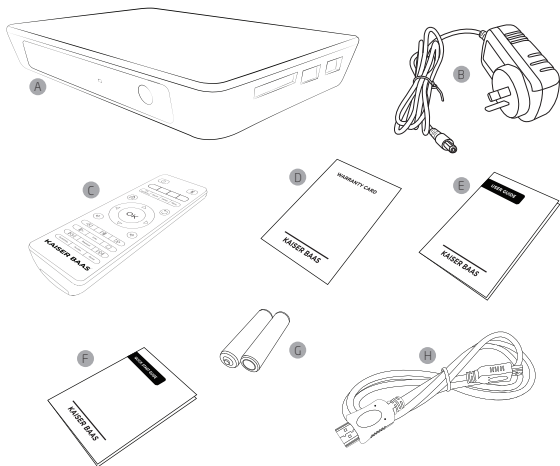

Product Diagram


Warning: Before you connect unit to a power outlet, read this Quick Start Guide and the safety information in the User Manual

 - 1 **Power Status**
Power status light turns blue when unit is on
- 2 **IR receiver**
Receives IR signals from remote control. Do not obstruct receiver.
- 3 **ON/Off button**
Turn unit on/off
- 4 **SD/MMC reader**
Reads secured digital cards
- 5 **2 x USB**
Standard USB 2.0 HOST port (Supports FAT32/NTFS/EXT3/HFS Storage file systems)
- 6 **Power socket**
Connects to the AC pack
- 7 **AV Out**
Connects to analog Video & Audio input on TV (cable not provided)
- 8 **Coaxial Digital audio out**
Connects to the amplifier/AV receiver (cable not provided)
- 9 **Component Video out**
Connects to the component (YpbPr) input on TV (cable not provided)
- 10 **HDMI out**
Connects to the HDMI input on TV (cable provided)

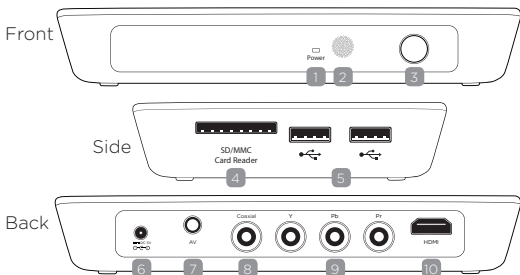

HD MediaHub+ Remote

 
- 1 Power button
 - 2 Mute button
 - 3 TV System
 - 4 Zoom
 - 5 Setup
 - 6 Menu
 - 7 Home button
 - 8 Back
 - 9 Arrow Keys/Navigation
 - 10 OK/Enter
 - 11 Volume up
 - 12 Volume down
 - 13 Rewind
 - 14 Play/Pause
 - 15 Fast Forward
 - 16 Slow motion
 - 17 Info
 - 18 Stop
 - 19 Previous
 - 20 Repeat
 - 21 Next
 - 22 Subtitle
 - 23 Audio
 - 24 Goto
- Eject
● A - B

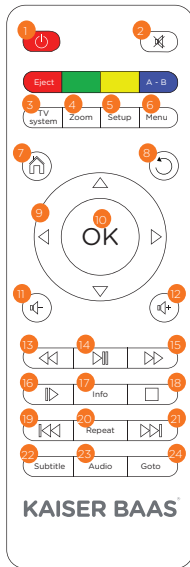


Note: When using Remote control, point control straight to unit's 'IR receiver'. Batteries must be inserted into Remote control before using.

● ● ● ● *Functions vary according to the content being viewed. Refer to Movies, Music or Photos section for a description of the functions of these buttons*

 Setting up the HD MediaHub⁺

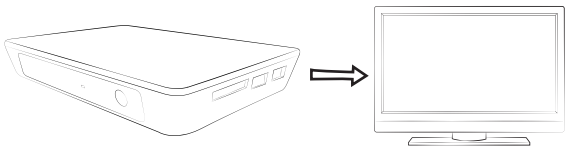


Steps to Connect:

 

1

Connecting HDMI cable

 - Connect one end of cable to the back of TV
- Connect the other end to the 'HDMI' port in HD Media Hub⁺

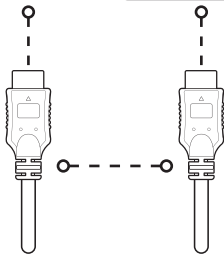


2

Connecting Power cord

 - Connect the cord to 'Power socket' of HD MediaHub⁺
- Connect the wall plug to a power outlet



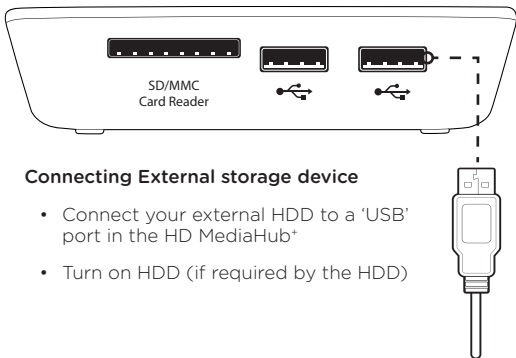

3

Connecting External storage device

- Connect your external HDD to a 'USB' port in the HD MediaHub+
- Turn on HDD (if required by the HDD)

4

Turn HD MediaHub+ on

- Turn power on at power outlet
- Press 'ON/OFF button' in front of unit

Note: Alternatively use Remote control to turn on HD MediaHub+. When using Remote control point control directly at unit's 'IR receiver'. Batteries must be inserted into Remote control before using.

- 'Power indicator' light will turn blue

5

Turn on TV

- Select the proper HDMI source on your TV.

Note: If there is no HDMI input on TV, you may need to use AV or component cables and select appropriate TV input source on TV depends on your connection (these cables are not provided).

 
- Wait a few seconds for your TV to recognise the media hub plus. If it is not detected you may need to check the cables, connections, input source on TV.
- Device will boot up and Home Screen will appear with the following options:
 - File Manager
 - Movies
 - Photos
 - Music
 - Setup

Home Screen

The home screen is the first screen of information displayed when the HD MediaHub⁺ is started. The home screen can also be accessed at any time by pressing the HOME BUTTON (🏠) on the remote control.

Home Screen Options

The icons on this screen let you browse the media library and configure the media Player's settings.

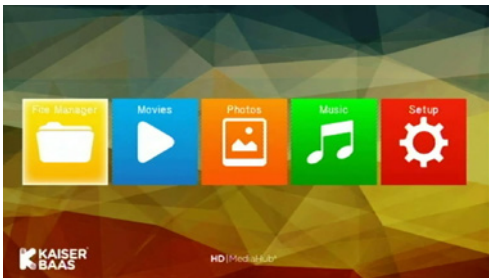

Home Screen Screenshot

Note: Use the arrow keys to navigate through menus and OK button to confirm selection.



1. File Manager

The file manager allows you to browse and access the media files stored on the external storage device.

Navigation: Use the arrow keys to navigate and OK button to confirm selection/open file.



File Manager Screenshot

1.1. Accessing files through File Manager

 
Go to File Manager from home screen.

Press OK to Select the External Storage Medium (USB or SD/MMC) and choose your storage device.

Note: It may take up to 5 minutes to scan and list your hard drives. If you do not see any devices, turn unit off and on again then repeat selection.

Folder view options

Press the Menu button to display the following submenu. This menu is also available from the Movie library, Photo library and Music library.

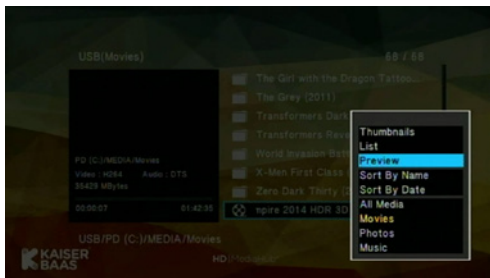

Folder View Options Screenshot

 
Note: This menu cannot be accessed while playing movies.

- Thumbnails - To view the folder contents as thumbnails
- List - To view the folder contents as a list
- Preview - To see preview when the file is selected
- All Media - To display all the supported files in current directory
- Movies - To display all the supported video files in current directory.
- Photos - To display all the supported image files in the current directory

- Music - To display all the supported audio files in the current directory

File Editing option

Use this option to transfer file, rename and delete files.

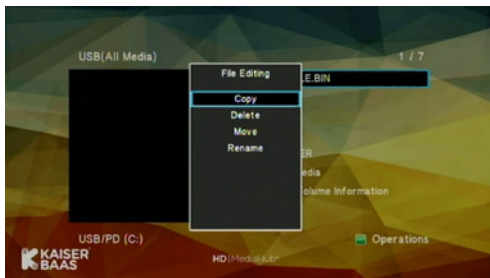

File Editing Screenshot

Select the File/Folder that you want to edit

Press green button on the remote to display the File Edit options.

You will see the following options:

- Copy
- Delete
- Move
- Rename

Select your required function and press OK.

File Transfer: To copy/move a file from one location to another choose the source file/folder, press the green button on the remote to bring the File Edit options > Select Copy or Move function.


Press OK.

Select the destination folder and press the Play/Pause (▶||) button to confirm.



2. Movies

 The Movie library will allow you to browse and play your video files.

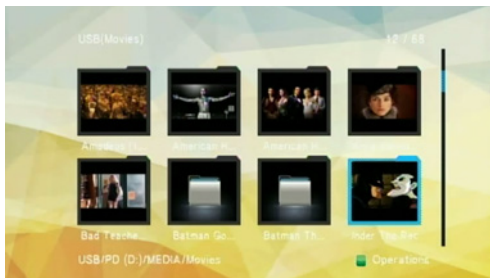

Movie Library Screenshot

*Note: Only supported video files will be listed under Movie library.
(AVI/MKV/TS/TP/TRP/M2TS/MPG/MP4/M4V/MOV/VOB/ISO/IFO/
DAT/WMV/ASF/RM/RMVB/FLV)*

Navigation: Use the arrow keys to navigate and OK button to confirm selection/view movie.

Select the Storage Medium (USB or SD Card)

Note: Only the connected storage mediums will appear on the list.


Choose the Storage Device from the list and open the folder that contains Video files.

Folder View Options : See the Folder view option under File Manager.

Note: This menu cannot be accessed while playing movies


Video playback controls

- | | | |
|----|--------------|---|
| 1 | Eject | Eject external storage device |
| 2 | Edit File | File transfer, rename or delete |
| 3 | Aspect Ratio | Choose between aspect ratios - 4:3, 16:9 or 16:10 |
| 4 | A to B | Select and loop a section of video |
| 5 | Zoom | Zoom in the image. |
| 6 | Menu | Display or hide the option menu during playback. |
| 7 | VOL+/- | Increase/decrease the volume. |
| 8 | FR/FF | Fast rewind or fast forward. Press repeatedly to select the speed. |
| 9 | Play/Pause | Pause or resume the current playback. |
| 10 | Slow | Play back in slow motion. |
| 11 | Info | View the media information. |
| 12 | Stop | Stop playback. |
| 13 | Prev/Next | View the previous or next file/chapter. |
| 14 | Repeat | Set the repeat option. |
| 15 | Subtitle | Select a subtitle and change the color/size/offset/text encoding of subtitle. |
| 16 | Audio | Select an audio track. |
| 17 | Goto | Jump to a specific point on a title. Specify the point using Title, Chapter and Time. |

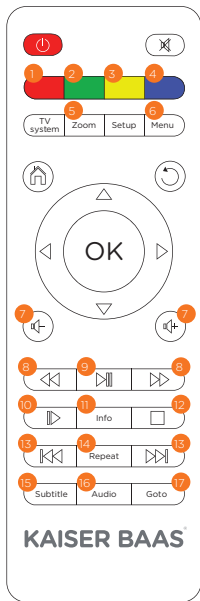 

Movie Playback Options:

 During the movie, press the Menu button to display the following submenu.

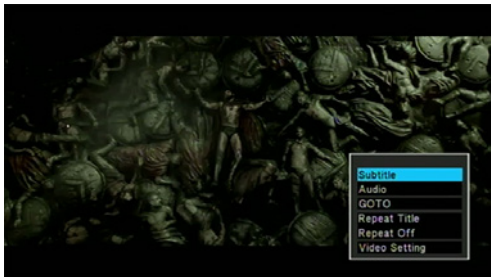

Movie Playback Options Screenshot

- Subtitle - Display subtitles if available
- Audio - Change Audio track if available
- Goto - Jump to a specific point on a title. Specify the point using Title, Chapter
- Repeat title - movie repeats when complete
- Repeat all - repeat movies in storage device or selected files
- Repeat off - turns repeat off
- Video setting - to adjust the value of Brightness, Contrast, Saturation and Hue.



3. Photos

The Photo library will allow you to browse and play your image files.



Photo Library Screenshot

Note: Only supported image files will be listed under Photo library. - JPEG/BMP/GIF/TIF/PNG

Navigation: Use the arrow keys to navigate and OK button to confirm selection/view photo or slideshow.

Select the Storage Medium (USB or SD Card)

Note: Only the connected storage mediums will appear on the list.


Choose the Storage Device from the list and open the folder that contains image files.

Folder View Options : See the Folder view options under File Manager.

Note: This menu cannot be accessed while viewing photos

Photo playback controls

- | | | |
|---|-------------|--|
| 1 | Zoom | Zoom in the image. |
| 2 | Menu | Display or hide the option menu during playback. |
| 3 | Prev / Next | View the previous or next photo. |
| 4 | Up / Down | Rotate a photo in any angle. |
| 5 | Stop | Stop playback. |

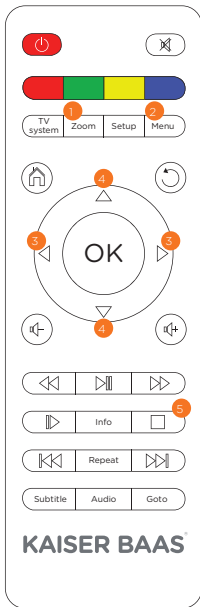 

Tip: Slideshow with background music

1) Go to Music and play the music

2) Go to Home Screen

3) Open the Photo Library and start slideshows.

Photo Playback Options

During photo playback, press Menu button to display the following submenu.



Photo Playback Options Screenshot

Slide timing - To Select the slide transition time

Slide transition - To Select the slide transition effect

Repeat Off - Turn off repeat feature

Repeat All - To repeat slideshow

 
Shuffle loop - Shuffle images

Video setting - to adjust the value of Brightness, Contrast, Saturation and Hue.



4. Music

The Music library will allow you to browse and play your audio files.

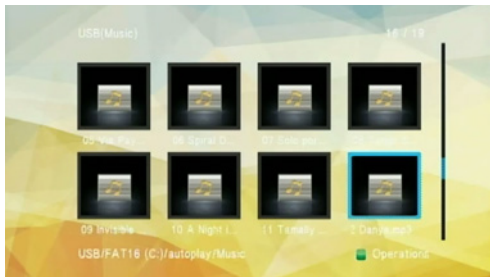

Music Library Screenshot

Note: Only supported audio files will be listed under Music library (MP3/OGG/WMA/WAV/FLAC/APE)

Navigation: Use the arrow keys to navigate and OK button to confirm selection/play music.

 
Select the Storage Medium (USB or SD Card).

Note: Only the connected storage mediums will appear on the list. Please refer to user manual for more info.

Choose the Storage Device from the list and open the folder.


Music playback controls

- 1 Menu Display or hide the option menu during playback.
- 2 VOL+/- Increase/Decrease the volume.
- 3 FR / FF Fast rewind or fast forward. Press repeatedly to select the speed.
- 4 Play/Pause Begin/Pause playback.
- 5 Prev / Next View the previous or next movie.
- 6 Repeat Set the repeat option.

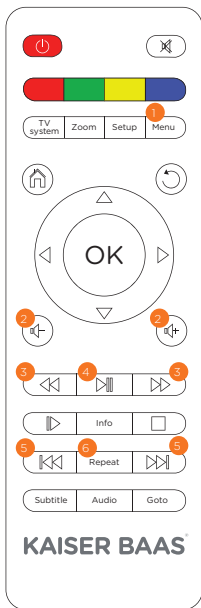

Music Playback options

 During Music playback, Press the Menu button to display the following playback submenu.

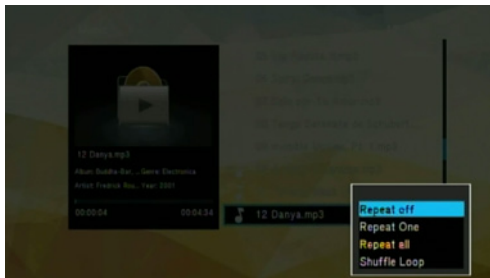

Music Playback Options Screenshot

Repeat Off - Turn off repeat feature

Repeat one - Repeat the playing file

Repeat All - Repeat all files in the directory

Shuffle loop - Shuffle music files

Folder View Options : See the Folder view options under File Manager.

Note: This menu cannot be accessed during music playback.



5. Setup

The Setup menu on home screen allows you to personalize and configure the preferences for your player.



Setup Options Screenshot

 
To access setup menu, select the Setup icon on home screen using right/left arrow keys and press the OK button to confirm. Alternatively press the Setup button on the remote control.

Navigation: Use Arrow keys to navigate through menus and Press OK button to confirm. Press Back to cancel and display the previous menu screen.

Setup options

SYSTEM

Use this menu to configure system settings.

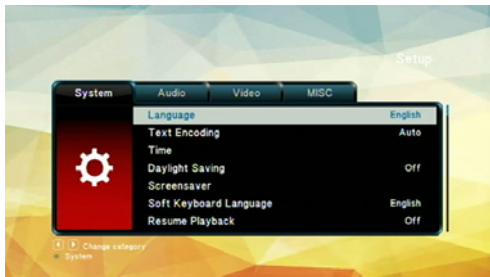

System Settings Screenshot

 
- Language
 - To choose the OSD (On-Screen Display) language
- Text Coding
 - To Select text encoding (Subtitle display)
- Time
 - To select time zones.
- Daylight Saving
 - To Set the daylight saving on/off

- Screensaver
 - To adjust the screen saver settings
- Soft-keyboard Language
 - Onscreen Keyboard Language
- Resume Playback
 - To continue watching movie from last stop
- Format Storage
 - To erase and clean the external storage device
- Auto Standby in 3hrs
 - Set Auto standby on/off
- CEC
 - (Consumer Electronic Control) A HDMI feature designed to allow user to control CEC enabled devices that are connected through HDMI.

Note : Only CEC compatible devices are supported

AUDIO

Use this menu to configure audio settings

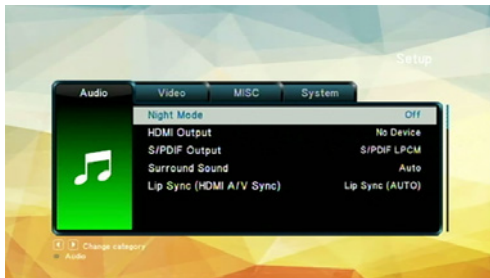

Audio Settings Screenshot

- Night Mode
 - If the option is turned on, the audio output volume will be decreased
- HDMI
 - HDMI LPCM (Media Player itself will decode the audio; preferred when connects to a TV through HDMI)
 - HDMI RAW (The Amplifier/AV Receiver will decode the audio; preferred when connects to the amplifier /AV receiver)
 - HDMI Auto

 
Note: Due to the bandwidth requirement, Dolby TrueHD and Dolby Digital Plus sound only can be passed through HDMI cable, also the TV system must up to 720p or above.

S/PDIF output

- Select LPCM or Raw
- Set to LPCM by default
- Surround Sound
 - Option to select 5.1 channels, HD audio or auto.
- Lip Sync
 - Syncs audio with video playback
 - Select Auto, Manual or Off

VIDEO

Use this menu to configure audio settings.

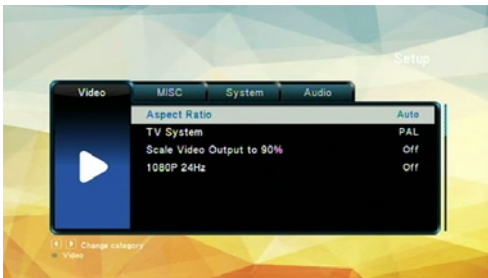

Video Settings Screenshot

- Aspect ratio
 - 4:3 - Display a wide picture with two black borders on the top and bottom of 4:3 screen. Select when a standard 4:3 TV is connected
 - 16:9 - Compress the image to convert the whole image. Select when a 16:9 TV is connected
 - 16:10 - Select when a 16:10 TV is connected
- TV System
 - Select to adjust TV Type and video output resolution. This setting depends on your TV and region
 - For HD, 1080P 60Hz is preferred

Note: To set HD resolution, TV must support 1080P 60Hz.
- Scale Video to 90%
 - Settings to on/off Scale video function
- 1080p 24Hz
 - Set whether to use 1080p 24Hz video output mode

MISC

Use this menu to adjust miscellaneous settings.



Misc Settings Screenshot

- USB upgrade
 - Select to update the firmware via a USB stick

Download the firmware from Kaiser baas website, copy firmware file to the root directory of a USB stick, and connect it to the USB HOST port of the player. Go to USB upgrade option from the 'Misc' settings menu and Press OK to confirm.

Alternatively, there is firmware upgrade button inside the Yellow AV output (Composite) socket on the back of the unit.

To update the firmware this way:

1. Turn the Media Hub Off
2. Insert the USB stick containing firmware to USB port
3. Insert a non-metal pin into Yellow AV output (Composite) socket

4. Press and hold the reset button and continue holding while turning the HD MediaHub+ on
 5. Once firmware installation starts release reset button
- Key Tone Volume
 - Select to set the Key Tone Volume on/off
 - Factory Default
 - Select to restore factory defaults.

Frequently Asked Questions

General tips to help you enjoy the HD MediaHub⁺

Q. I cannot turn my unit on?

- A1. Check that you have turned it on at the power outlet.
- A2. As an alternative use the remote control "POWER" button to turn the unit ON/OFF.

Q. I cannot see my HDD?

- A. It may take up to 5 minutes for the HD MediaHub⁺ to scan your HDD and list it under the library. If that doesn't work, turn the unit OFF, wait 5 seconds and turn it back on.

Q. Can I plug in my HDD when the unit is on?

- A. Yes.

Q. The movie does not fill up my TV screen?

- A. Check the Aspect Ratio setting is consistent with your TV. Go to Home Screen, Set up, Video and select Aspect Ratio that fits your TV

Q. There is no picture on my TV?

- A1. Check TV and HD MediaHub⁺ are both on.
- A2. Ensure the Source selection on your TV is correct.
- A3. Make sure all your cables are plugged in securely.

Q. My unit is getting warm?

- A. The unit will be slightly warm when operating normally.

Contact Us

Having trouble setting your HD MediaHub+ up?

Please contact us. No question too big or small and we are more than happy to help.

Please visit:
www.kaiserbaas.com/support

Or email:
helpdesk@kaiserbaas.com

For further information please visit:
www.kaiserbaas.com

Tech support:
e: helpdesk@kaiserbaas.com
w: www.kaiserbaas.com/support
p: Australia 1300 302 306
p: New Zealand 0800 302 306
(business hours, AEST)



