

# X200

---

## Quick Start Guide

Visit [kaiserbaas.com](http://kaiserbaas.com) for more information

 
 
## Remove the camera from the Waterproof case

1

Slide lock and lift mount to unlock casing. Ensure camera is charged before use.

2

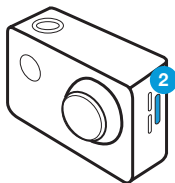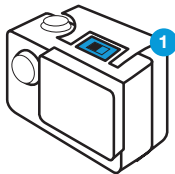

Insert the MicroSD card. Navigate to Setup, Format Card and select by pressing the Record button.

 


Note: The camera is not waterproof without the case. For SD card compatibility, visit [www.kaiserbaas.com/support](http://www.kaiserbaas.com/support)

## To turn the camera ON/OFF, hold the power button for 2 seconds

1

Press the record button to start and stop recording. To toggle between  Video,  Photo, Playback and Settings Mode, click the power button consecutively until your desired mode appears.

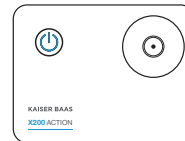 


## You can display the camera LCD screen on a TV Screen.

Turn the camera on.

Connect Mini HDMI end to the port on the camera and HDMI end to HDMI port on the TV.

Select the right source on the TV.

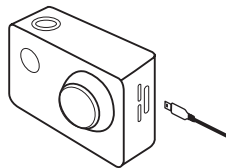

Note: You will need a Micro HDMI to HDMI cable

### X200 Action Cam KBA12051

#### Video Resolutions

 
 
1920 x 1080	30FPS
1280 x 720	30FPS

#### Photo Resolutions

12M, 8M, 5M, 3M, 2M

#### Storage

Class 10 MicroSD card (or higher)  
Max 32GB

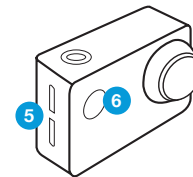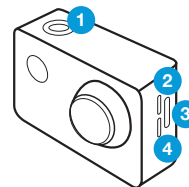

- |                  |                     |
|------------------|---------------------|
| 1. Record / OK   | 4. Micro HDMI       |
| 2. Micro USB     | 5. Scroll Up / Down |
| 3. Micro SD Port | 6. ON / OFF / Modes |

Visit [www.kaiserbaas.com/support](http://www.kaiserbaas.com/support) or email [helpdesk@kaiserbaas.com](mailto:helpdesk@kaiserbaas.com) for support. For the complete user guide, visit [www.kaiserbaas.com](http://www.kaiserbaas.com)

# KAISER BAAS

KBA12051-002 | A02